

## IF IN DOUBT – ASK

## WIRING AND FUNCTION

FOR DC POWER SUPPLY: "L" EQUAL "B+" , "N" EQUAL "0"

APPLY POWER SUPPLY: AC 100~230V OR DC 12V~48V TO "L"&"N"

CONNECT SW-A TO START BEACON IN POSITION C

TO ADJUST THE BEACON FLASHING FREQUENCY, PLEASE REFER TO THE INSTRUCTIONS IN THE PRODUCT TECHNICAL MANUAL.

DO NOT SUPPLY AC OR DC POWER TO S0 /S1/S2

Cable S	Selection
---------	-----------

Please select suitable size cable according to the distance between control room and the terminals and the quantity of equipments used.

Normal size for AC power supply cable L & N is  $1.5mm^2$ . Normal size for DC power supply cable L & N 2.5  $mm^2$ .

Please select the quantity of control cables (2 to 7) according to the actual requirement. Normal size for control cable is 1mm<sup>2</sup>.

AS PARTS		MATERIAL: AS PAR		S	
EX-TECH WIRING DIAGRAM SL125/SL150					
BPJ BC-PB-JB					
ANDARD WIRING NO RESISTOR(S) NO DIODE(S)					
THE WRITTEN	SCALE@	A3 DWG N	0.	0	
	NTS	21	21/A3	2	
Н					
11			1		